



MODEL 44876 / 44877

USER'S GUIDE

GET TO KNOW YOUR COURSEPRO ELITE



KEYS

1. Power/Menu Key
2. 5 Way Navigation Key Pad
(Edges are directional.
Center button is "Select")
3. Page Key

ICONS

- A. Satellite Signal Strength
- B. Golf Course Name
- C. Real Time Display
- D. Hole and Par Information
- E. Battery Strength
- F. Distance to Green Information

Course Pro | ELITE

www.celestronGolf.com

DETAILS OF YOUR COURSEPRO ELITE



#44876



#44877

MAIN FEATURES

- >> 20,000+ course maps available online for download
- >> 5 FREE course map downloads included with your purchase
- >> Stores up to 100 course maps
- >> 2.2" Full transfective color (TFT) LCD screen; sunlight readable, 240x320 pixels / 260K
- >> Backlight option for viewing in low light
- >> Powered by Lithium Ion 1100maH rechargeable battery; 8-10 hours of life per charge
- >> Water resistant to IXP6 industry standard
- >> WAAS enabled and SiRF Star III sensitivity for better signal strength
- >> Green View screen shows the distance to front, center and back of green
- >> Green Edit function allows you to change the front, center and back distance to green
- >> Shot Distance calculator allows you to measure distance for any shot
- >> Scorecard feature allows you to track your score
- >> Create New Course function gives ability to map your own course
- >> Course Edit function allows you to add hazards such as sand traps and water to existing course map
- >> Time displayed on LCD screen
- >> Choice of 12 languages
- >> Belt Clip and Soft Storage bag included
- >> Mini USB cable included
- >> 2 Year Warranty on components
- >> Dimensions: 2.30" x 4.6" x 1"
- >> Weight: 6 oz.

Course Pro | ELITE

www.celestronGolf.com


GET STARTED

CHARGE YOUR COURSEPRO ELITE

- > Using the included USB cable, plug your CoursePro Elite into an open USB port on your computer
- > Charge time is about 4 to 5 hours
- > A full charge will last 8 to 10 hours

NEW USER SETUP

- > Log onto **www.celestronGolf.com**
- > Locate and select one of the **New User** buttons

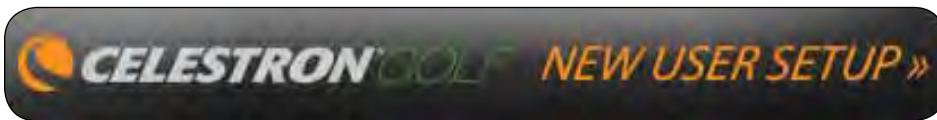

- > Download the latest software
- > Create an account and register your CoursePro Elite
- > Choose your payment options

DOWNLOAD COURSE MAPS

- >> Log onto **www.celestronGolf.com** and select the 'Download Courses' button
- >> The Course Download window will load
- >> If you are not already signed on, you will be prompted to log in
- >> In the search window, type the name of the course you would like to download or browse through the list to find your course
- >> Once the course is located, click the course map icon for your course
- >> Depending on your payment plan and the number of courses you may have already downloaded, you may be prompted to pay for the course
- >> Follow the on screen instructions to pay for the course and verify your payment
- >> Once verified, the download will begin
- >> Once completed you will be prompted to save the course map file to a folder on your computer



ADD COURSE MAPS TO YOUR COURSEPRO ELITE

- >> Turn on your CoursePro Elite (*remember to press and hold the ON button for at least 3 seconds*) and using the mini USB cable, connect it to your computer
- >> Open the Course Map Manager software by double clicking the icon on your desktop
- >> If your CoursePro Elite isn't automatically recognized, click **CONNECT** [Figure 1]
- >> Once your CoursePro Elite is recognized and syncs up with the Course Map Manager, select **ADD COURSE** [Figure 2], then **OPEN** [Figure 3]



Figure 2



Figure 3

Figure 1

- >> Browse to your saved folder and select the course map you would like to add
- >> The course map will download to your CoursePro Elite and show up in the **MY COURSE** window in the Course Map Manager interface
- >> Repeat these steps to add more course maps

PLAY GOLF


> **PRESS** and **HOLD** the **POWER** button for at least 3 seconds.



This screen will appear as your CoursePro Elite attempts to link to a satellite signal.




Once the satellite signal is locked in, this menu screen will appear. **PRESS** the upper or lower point on the ring of the **5 WAY NAVIGATION** key to scroll through your choices. **PRESS** the **CENTER** button of the **5 WAY NAVIGATION** key to select the **PLAY GOLF** choice.

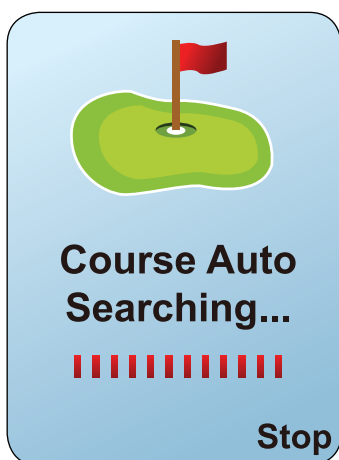

Your CoursePro Elite will auto search for a local course for you. You can stop the auto search by pressing the **PAGE** key.

PLAY GOLF

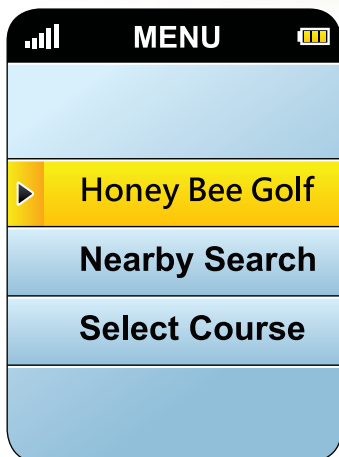

Once the auto search is complete, your screen will display the local course along with choices to select another nearby search or to select your course manually. To select the displayed course, **PRESS** the **CENTER** button of the **5 WAY NAVIGATION** key. **PRESS** the upper or lower point on the ring of the **5 WAY NAVIGATION** key to scroll through your choices and select your choice by again pressing the **CENTER** button.



If the course map cannot be found, this screen will be displayed, and you will be returned to the **PLAY GOLF** screen.




If your CoursePro Elite has no course maps downloaded to its internal memory, this screen will be displayed. See steps above for downloading course maps and saving them to your CoursePro Elite.

PLAY GOLF



Once you have selected the course you want to play, the **START** window will appear. The name of the course you selected will be displayed. **PRESS** the left and right points of the **5 WAY NAVIGATION** key to scroll to your preferred starting hole. **PRESS** the **CENTER** button to select.

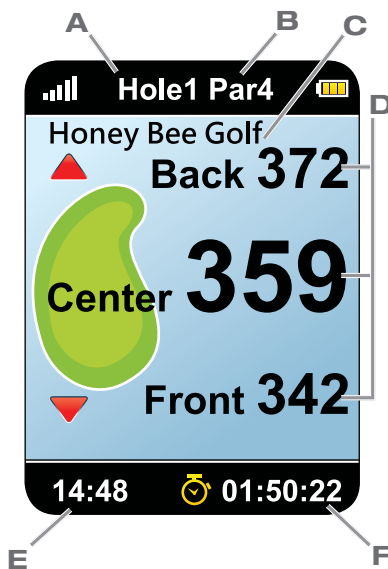

The **Green View** window will appear displaying information about this hole.

GREEN VIEW INFORMATION:

- > Hole Number [A]
- > Par for the Hole [B]
- > Name of Course [C]
- > Distance to the back, center and front of the green [D]
- > Real time [E]
- > Your round running time [F]

You are now ready to tee off.

OTHER FEATURES

I. SCORECARD PAGE

ScoreCard						
H	P	S	H	P	S	
1	6	7	10	6	7	
2	5	4	11	5	4	
3	4	3	12	4	3	
4	4	4	13	4	4	
5	4	5	14	4	5	
6	4	6	15	4	6	
7	4	5	16	4	5	
8	4	5	17	5	5	
9	4	4	18	4	4	
Total			37(=+1)			

SCORECARD
MAIN PAGE

Hole 1	
Honey Bee Golf	
Par	5
Score	3
Total 3(=-2)	

HOLE DETAIL WINDOW



To access the **Scorecard page** from the **Green View** window, **PRESS** the right edge of your **5 WAY NAVIGATION** key.


The Scorecard is a tool that will enable you to track your score and edit the par rating of any hole. Once you are in the **Scorecard** main page window, the hole that you are currently playing will be highlighted. To enter a score or change the par of this hole, **PRESS** the **CENTER** button of the **5 WAY NAVIGATION** key to open up the Hole Detail window. To change information on any other hole, **PRESS** the bottom and top edge of your **5 WAY NAVIGATION** key to highlight the desired hole and **PRESS** the **CENTER** button to open up the **HOLE DETAIL** window.

In the **Hole Detail** window, the hole number and name of the course are displayed at the top. Your total score and cumulative par information for the round are displayed at the bottom.

The par number is displayed above the score and is highlighted in yellow. To change the par, **PRESS** the right/left edge of your **5 WAY NAVIGATION** key to increase or decrease the displayed number. To add your score, **PRESS** the bottom edge of your **5 WAY NAVIGATION** key to scroll down to 'score' and use the **5 WAY NAVIGATION** key right/left edges to increase or decrease the number. You will notice that when you adjust the score for the hole, your total score for the round will change. When satisfied with your changes, **PRESS** the **CENTER** button to return to the main scorecard window. **PRESS** the left edge of your **5 WAY NAVIGATION** key to return to the **Green View** page, or **PRESS** the right edge to go to the next feature page - the **Shot Distance** page.

OTHER FEATURES

II. SHOT DISTANCE PAGE

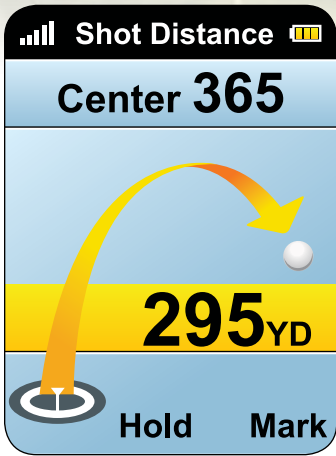

The **Shot Distance** page allows you to measure the distance of any of your shots easily and precisely. Before teeing off or taking any shot, **PRESS** and **HOLD** the **PAGE** key until the displayed distance in the yellow band is reset to “0”. You are now ready to hit away. After hitting away, and as you move towards your ball’s new position, your CoursePro Elite will be calculating the distance. When you arrive at your ball’s new position, look at your CoursePro Elite screen.



The number displayed in the yellow band has now changed to represent the distance that your ball has traveled. **PRESS** the **CENTER** button of the **5 WAY NAVIGATION** key to lock this number in. This number will remain until you want to measure your shot distance again. Repeat the same steps to measure your next shot or **PRESS** the left edge of the **5 WAY NAVIGATION** key to return to the **Scorecard** page or **PRESS** the right edge to go to the **Edit Course** page.

OTHER FEATURES

III. EDIT COURSE PAGE

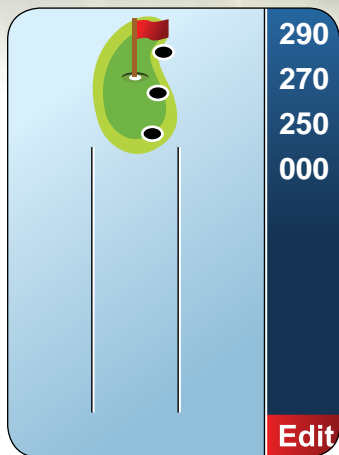


Figure 1

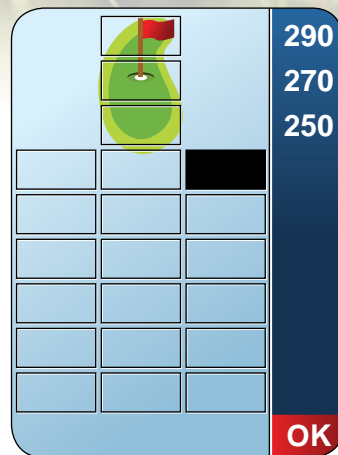


Figure 2



Figure 3



Figure 4

Using CoursePro Elite's GPS mapping capabilities, the **Edit Course** feature allows you to mark and save up to 6 hazards for each hole to the course map. By marking the coordinates of the hazards as you play, the next time you play the course you will have a guide that will enhance your game even more.

Figure 1 demonstrates a graphical representation of the hole you are playing with distances for the front, center and back of the tee listed. To edit the hole when you are on the course and have arrived at a new obstacle, **PRESS** the **PAGE** key and select **EDIT**.

The **Hazard Grid** window will load, Figure 2. This window displays the green and a grid of boxes in front of the green that represent the fairway of the hole. One box is highlighted black and represents the spot where you want to mark the hazard. To move to a different box in the grid, **PRESS** the edges of the **5 WAY NAVIGATION** key. Once you have selected the desired box, **PRESS** the **CENTER** button of the **5 WAY NAVIGATION** key. In general, hazards closer to the green should be entered in boxes at the top of the grid and hazards further away from the


green should be entered towards the bottom of the grid, but you are free to mark the hazards where you like.

The **Hazard Choice** window will now be displayed, Figure 3. The **Hazard Choice** window displays all of the icons available to mark your hazard or obstacle. **PRESS** the edges of the **5 WAY NAVIGATION** key to select an icon. Icon choices are trees, water, river, dogleg (arrows), rocks, hills, sand traps, etc. You will notice that some of the icons are similar but include directional arrows; these arrows indicate that you are marking the beginning or end of the obstacle. This is important to note for large bodies of water or other obstacles that cover a large area of the fairway. Once you have highlighted the icon you wish to use, **PRESS** the **CENTER** button of the **5 WAY NAVIGATION** key.

You will now view the **Revised Hazard Grid** screen, Figure 4, where your just marked selected hazard will be displayed as a "0". This means that the hazard spot has been marked in the devices memory. The next time you play the hole, the distance from that hazard will be displayed. As you play the hole, you can keep marking hazards.

OTHER FEATURES

IV. CREATE COURSE FEATURE

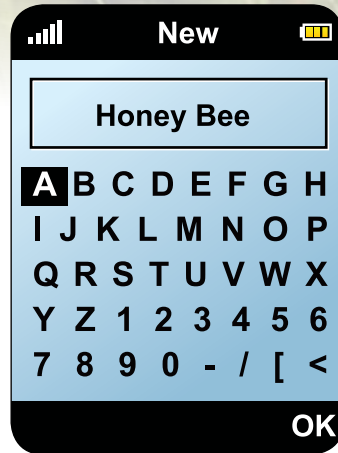

If your course map is not available in our database of over 20,000 courses, then this feature allows you to map your own. From the main window, **HIGHLIGHT** and **SELECT** the **Create Course** bar. Name your course using the **5 WAY NAVIGATION** key. When finished, press the **PAGE** key (**OK**) to go back to the main

window. To map this course, select **Play Golf** and when prompted to pick a course to play, choose your new course. As you play, use the **Edit Course** feature (*see section 3 in "Other Features" for detailed instructions*) to add tee and green icons as well hazards if you choose.

CUSTOMIZE SETTINGS



To change the default settings, from the main screen, scroll down and select the **SETTINGS** bar.



The **Settings** screen will appear.

Here you can select from the following options:

- > Select or delete a course map from CoursePro Elite's memory
- > Change units
- > Adjust the backlight timer
- > Set auto power off settings
- > Select language
- > Set time zone
- > Reset round timer
- > Set time format
- > Receive device information





V. COURSE SELECT

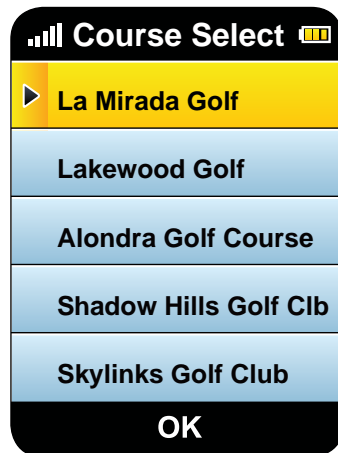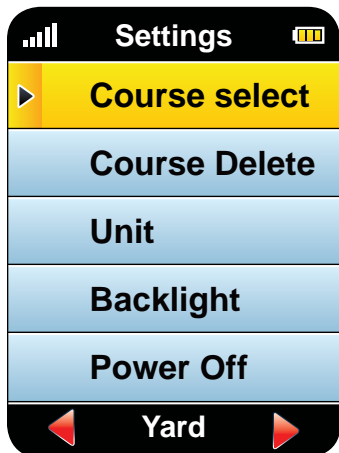

Use the **5 WAY NAVIGATION** key to select your desired course. You will automatically be brought back to the main menu page when complete.

CUSTOMIZE SETTINGS


VI. COURSE DELETE

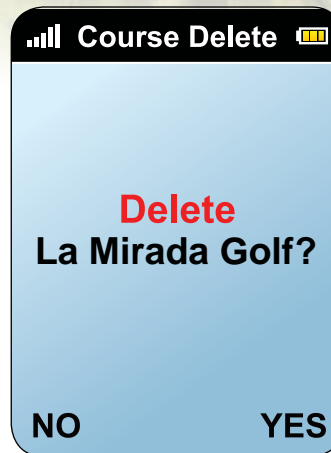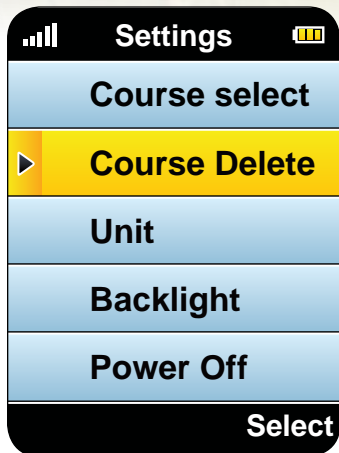

You may want to delete courses from your CoursePro Elite's internal memory to free up space. Using the **5 WAY NAVIGATION** key, select the course you want to delete. You will be asked if you are sure you want to delete this course. Select **YES** (*Page Key*) or **NO** (*Power Key*). If you select **NO**, you will be brought back

to the previous window and prompted to choose a different course. If you select **YES**, the selected course will be deleted and you will be brought back to the **Course Delete** window where you can choose more courses to delete. When done deleting courses, **PRESS** the **START** key to return to the main menu page.


VII. CHANGE YARD/METER UNITS

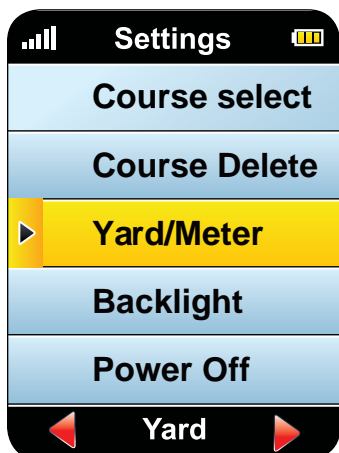

CoursePro Elite's distance units are displayed in either Yards or Meters. The default setting is Yards (*YD*). To change to Meters (*M*), **PRESS** the left or right edge of your **5 WAY NAVIGATION** key. **PRESS** the up or down edge of your **5 WAY NAVIGATION** key to continue scrolling through the **Settings** options.

CUSTOMIZE SETTINGS


VIII. ADJUST BACKLIGHT TIMER

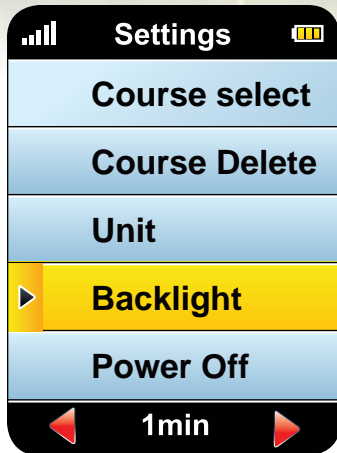

You can adjust the time the backlight stays on to save battery power. With the **Backlight** bar highlighted, press the left or right edge of your **5 WAY NAVIGATION** key to switch the time. The default time is 3 minutes. Your choices are 1 minute, 3 minutes, 10 minutes, 30 minutes and **Backlight Always On**. **PRESS** the up or down edge of your **5 WAY NAVIGATION** key to continue scrolling through the **Settings** options.




IX. AUTO POWER OFF

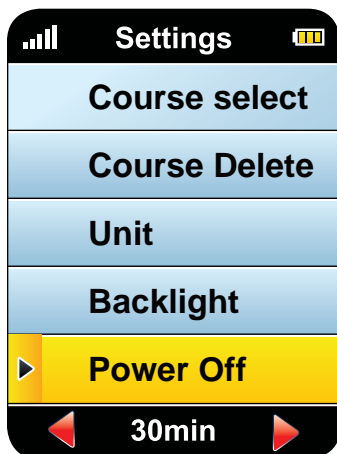

You can set your CoursePro Elite to automatically shut down after a certain time of non-use. With the **Power Off** bar highlighted, press the left or right edge of your **5 WAY NAVIGATION** key to switch the time. The default setting is 30 minutes. Your choices are 30 minutes, 40 minutes, 50 minutes, 60 minutes, 70 minutes, 80 minutes, 90 minutes, 100 minutes, 110 minutes, 120 minutes and **Always On**. **PRESS** the up or down edge of your **5 WAY NAVIGATION** key to continue scrolling through the **Settings** options.


X. LANGUAGE

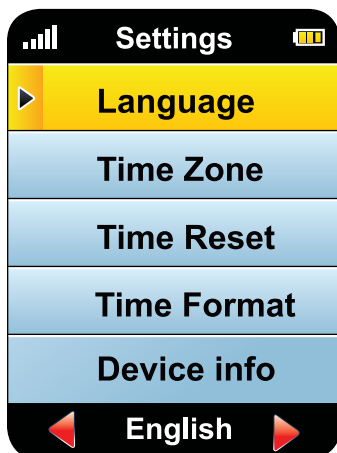


You have 12 language choices with your CoursePro Elite. They are English (*default*), Spanish, French, German, Italian, Traditional Chinese, Simplified Chinese, Japanese, Korean, Russian, Swedish and Czech. Once the **Language** bar is highlighted, **PRESS** the left or right edge of your **5 WAY NAVIGATION** key to switch between the language choices and **PRESS** the **CENTER** button to make your selection. Once you make your selection, you will automatically be brought back to the **Settings** menu page.

CUSTOMIZE SETTINGS

XI. TIME ZONE SET

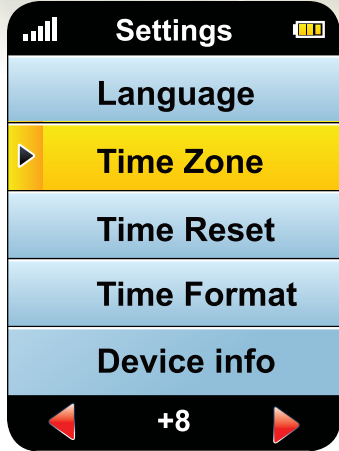


For the real time clock on your CoursePro Elite to display accurately, you will need to set your time zone. Use the chart below to find your location and + or - zone based on GMT (Greenwich Mean Time). **PRESS** the left or right edge of your **5 WAY NAVIGATION** key to find your zone. Most countries utilize some form of Daylight Savings Time and you will need to adjust your entry to reflect this as the GMT chart does not account for this. For example, if you are in Los Angeles, CA in the summer, and your time zone is “-8,” add 1 hour to the time which will give you “-7” (-8 + 1= -7).

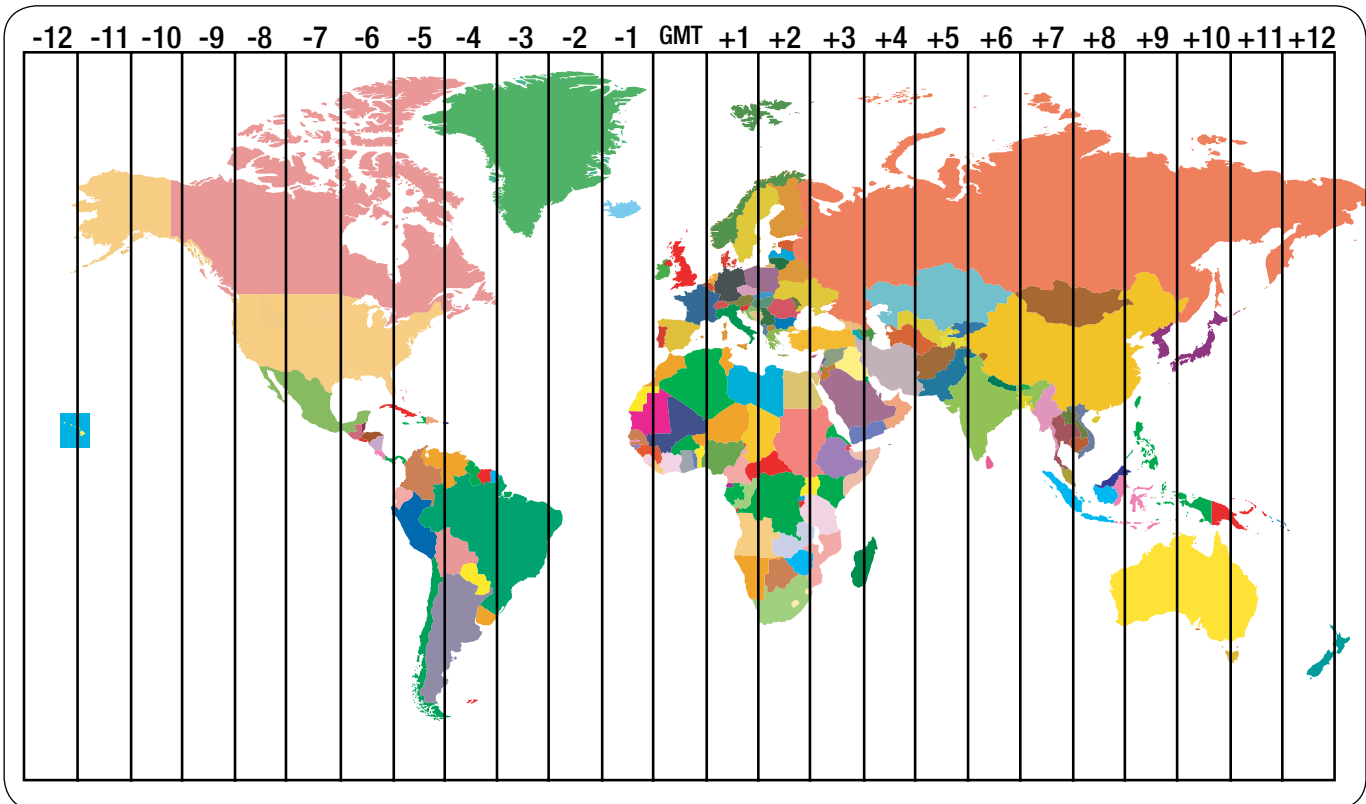

CUSTOMIZE SETTINGS


XII. ROUND TIME RESET

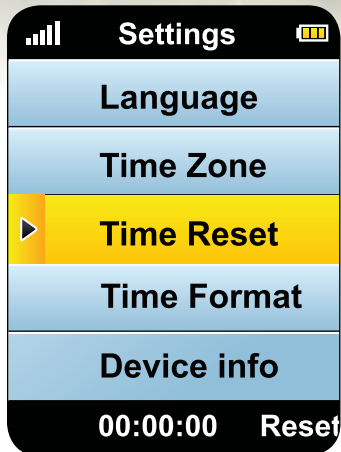

Your CoursePro Elite allows you to track your round time. This feature automatically starts once you select the hole you are starting from at the beginning of your round. With the **Time Reset** bar highlighted, **PRESS** the **PAGE** key and the clock will reset to 00:00:00.





XIII. TIME FORMAT

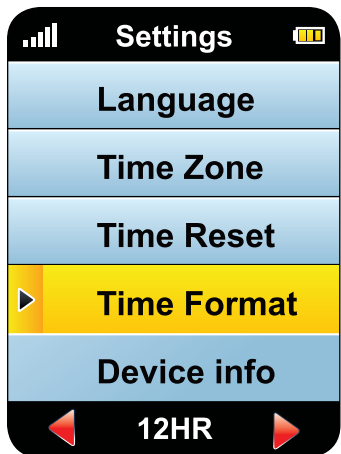

The default **Time Format** for your CoursePro Elite is 12H. To set it to 24HR (*commonly referred to as military time*), **PRESS** the left or right edge of your **5 WAY NAVIGATION** key.

XIV. DEVICE INFO

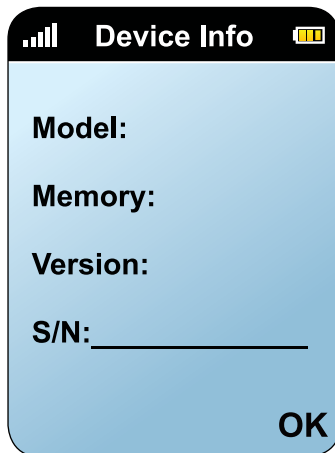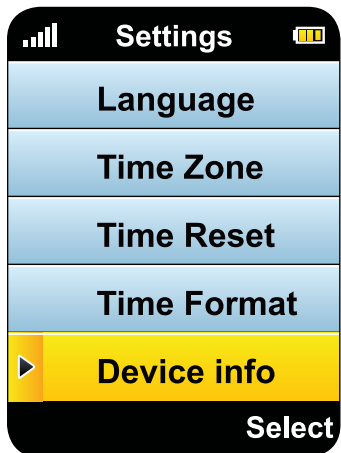

Device Info allows you to check your model number, memory info, hardware version info and serial number of your CoursePro Elite. **PRESS** the **PAGE** key when the **Device Info** bar is highlighted. **PRESS** the **PAGE** key again to return to the **Settings** menu.

CUSTOMIZE SETTINGS

XV. ACCESSORIES

- >> USB Cable
- >> Belt Clip
- >> Soft Carrying Pouch



USB Cable

Belt Clip

Soft Carrying Pouch

WARNINGS AND NOTICES

GPS Systems and Location

Accuracy Notice:

The Global Positioning System (GPS) is operated by the government of the United States of America, which is solely responsible for its accuracy and maintenance. The system is subject to changes which could affect the accuracy and performance of all GPS equipment. The inherent nature of the GPS system itself limits the accuracy of the distance indicated on the CoursePro Elite display to within roughly +/- 3 to 5 meters (or yards) of the actual marked location.

Warning:

This device is intended as a supplemental handheld navigation aide only. The user assumes all responsibility associated with the use of this product. It must not be used for any purpose requiring precise measurement of location, direction, distance, velocity or typography. This device should not be used for any aircraft navigation applications.

Vehicular Use Notice:

Celestron is committed to the safe and responsible enjoyment of the outdoors. Do not use this product while driving. An accident can result in property damage, injury or death if the operator fails to practice prudent driving

practices. It is the sole responsibility of the driver of any vehicle to operate the motor vehicle in a safe manner. Information from the GPS unit can distract the operator of a motor vehicle. It is unsafe to operate the controls of the GPS unit while operating a motor vehicle. If used in a motor vehicle, it must not be used by the operator of the motor vehicle. If it is used in a motor vehicle it must be mounted in a manner such that it does not distract the operator, does not interfere with the operator's field of view, and does not block or interfere with the air bags or other safety mechanisms of the motor vehicle. Windshields and car windows with integrated metallic materials, such as defrosters or car window tinting films, can degrade the GPS reception inside a car.

Liability Notice:

In no event shall Celestron be liable for any incidental, special, indirect or consequential damages, whether resulting from the use, misuse, or inability to use this product or from defects in the product. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.



©2011 Celestron
www.celestron.com

Designed and intended for those
13 years of age and older.

2835 Columbia Street • Torrance, CA 90503 U.S.A.
Telephone: 310.328.9560 • Fax: 310.212.5835

